



# **Check weigher**

**CW-6K**

**User's manual**

(Applicable for MCGS+C01 version)

## Contents

1. Summary.....	1
<b>1.1</b> Product Features .....	1
1.1.1 Mechanical part .....	2
1.1.2 Electrical part .....	2
<b>1.2</b> Usage Notice.....	2
1.2.1 Precautions .....	2
2. Product installation .....	3
<b>2.1</b> Overall appearance.....	3
<b>2.2</b> Mechanical installation .....	4
<b>2.3</b> Electrical installation .....	4
<b>2.4</b> Electrical interface .....	6
<b>2.5</b> Power supply power .....	10
3. Operation .....	11
<b>3.1</b> Operation summary .....	11
<b>3.2</b> Limit removal .....	11
<b>3.3</b> Basic operation .....	12
3.3.1 Power-on operation .....	12
3.3.2 Zero clear operation.....	13
3.3.3 Start up operation .....	14
3.3.4 Stop operation.....	14

3.3.5	Power off operation .....	14
<b>3.4</b>	User login .....	14
<b>3.5</b>	Product selection with New .....	15
3.5.1	Select product parameters .....	15
3.5.2	New product parameters.....	15
3.5.3	Modify product parameters.....	19
3.5.4	Delete product parameters.....	19
<b>3.6</b>	Calibration scale .....	19
3.6.1	The weight calibration scale .....	20
3.6.2	Dynamic calibration of scale .....	21
<b>4.</b>	Data viewing .....	24
<b>4.1</b>	Check the result data.....	24
<b>4.2</b>	Statistics .....	24
<b>4.3</b>	Alarm information.....	25
<b>4.4</b>	Statistical graph .....	26
<b>5.</b>	Quantity of switches .....	27
<b>5.1</b>	I/O I/O testing .....	27
<b>6.</b>	Working parameters .....	32
<b>6.1</b>	Working parameter Settings.....	32
<b>7.</b>	Communication .....	37
<b>7.1</b>	Communication parameters.....	37

7.1.1	Serial port communication.....	39
7.1.2	Network port communication.....	39
7.1.3	MAC address .....	40
<b>7.2</b>	The Modbus register communication address is defined .....	40
<b>7.3</b>	Print content .....	47
<b>7.4</b>	Set the parameters of the servo driver.....	48
8.	Program upgrade .....	49
9.	Size .....	50
<b>9.1</b>	Outline size drawing (unit: mm) .....	51
10.	Equipment repair and maintenance .....	53
<b>10.1</b>	Maintenance of motors .....	53
10.1.1	Routine maintenance .....	53
10.1.2	Regular maintenance .....	53
10.1.3	Precautions .....	53
<b>10.2</b>	Common problems of weight checking.....	53
10.2.1	Touch screen no display .....	53
10.2.2	Large pulsation and abnormal fluctuation of data .....	53
10.2.3	The display is always zero .....	54
10.2.4	Abnormal data display.....	54

Shenzhen General Measure Technology Co., Ltd. All rights reserved.

Without the permission of Shenzhen Geman Technology Co., LTD., no unit or individual may copy, disseminate, transcribe or translate into other language versions in any form or by any means.

Due to the continuous improvement and update of our products, we reserve the right to modify this manual at any time without prior notice. For this purpose, please visit our website frequently for timely information.

The company's Web address <http://www.gmweighing.com>

## 1. Summary

CW-6K standard weighing scale is a high speed, high precision and small range industrial automatic weighing scale developed by our company to meet the changing technological update.

The full touch screen makes the CW-6K weighing scale easy to operate, external expansion of IO input and output and external serial port communication to achieve multi-point control, monitoring and remote control of the product.

### 1.1 Product Features

Product parameters;

Model number	CW-6K
Power Supply	AC220V $\pm$ 10%, 50/60Hz, 850W
Weighing range	0.5 to 6kg
Accuracy of weight inspection	Plus or minus 2 g
Weight checking speed	100 pieces/min
Size of object to be measured	Length: 100~420mm Width: 50~400mm Height: 50~400mm
Conveyor belt speed	10 to 50 m/min
Belt size	500mm*400mm
Center distance of drum shaft	500mm
Countertop height	750 ( $\pm$ 50mm) (customizable)
Operating temperature	0 to 40°C
Maximum humidity	90% R.H non-dew forming
Ultimate load	The instantaneous ultimate load shall not exceed 10kg

**Note;Scale stands are strictly prohibited from being used over the range.**

### 1.1.1 Mechanical part

1. Electric control box is small and movable, easy to install and operate on site.
2. The servo driver is used as the motor driving device to ensure the speed stability and adjustability in the process of weight checking.
3. Double photoelectric mode more accurately determine the object up and down the weighing platform, improve the accuracy and efficiency of weight detection.
4. The height adjustment range of the weighing table is larger, which is convenient for customers to choose and use.
5. The mechanical modular design makes transportation and maintenance more convenient, and the application adaptability stronger.

### 1.1.2 Electrical part

- 1.Simple wiring, external only need to access the power cord;The internal use of different specifications pin plug terminal block, wiring is convenient and will not make mistakes.
- 2.Touch screen operation interface optimization, product parameter setting is simple and the main interface content is richer.
- 3.The three-color indicator shows qualified (green), out-of-tolerance (red), undertolerance (yellow), and the working state of the inspection weight is clear at a glance.Buzzer user can define the alarm mode.
- 4.The new algorithm is adopted in the process of weight inspection, and the high precision can be guaranteed in the process of high-speed weighing.
- 5.Optimize user login and logout function, without tedious operation and effectively prevent others from misoperation.

## 1.2 Usage Notice

### 1.2.1 Precautions

- 1.Do not perform mechanical or electrical maintenance while live, do not place tools on the scale, and do not perform welding operations on the scale.
- 2.The installation site must ensure the ground level, after installation through the foundation adjustment, ensure that the weighing table level, tilt does not exceed 0.5 degrees, away from the vibration source.
- 3.Make sure the equipment is safely grounded and there is no strong electricity or magnetic field interference nearby.
- 4.Do a good job of fire prevention, avoid direct sunlight to check the weighing table and relatively strong air flow (outdoor air, fan and air conditioning outlet is directly against the weighing table).
- 5.Should avoid squeezing, stepping on the scale platform, handling should first fixed scale, installed sensor limit to prevent damage to the sensor, prohibit the direct handling of the scale platform to move.

## 2. Product installation

### 2.1 Overall appearance

The product appearance is shown in Figure 2-1 below.

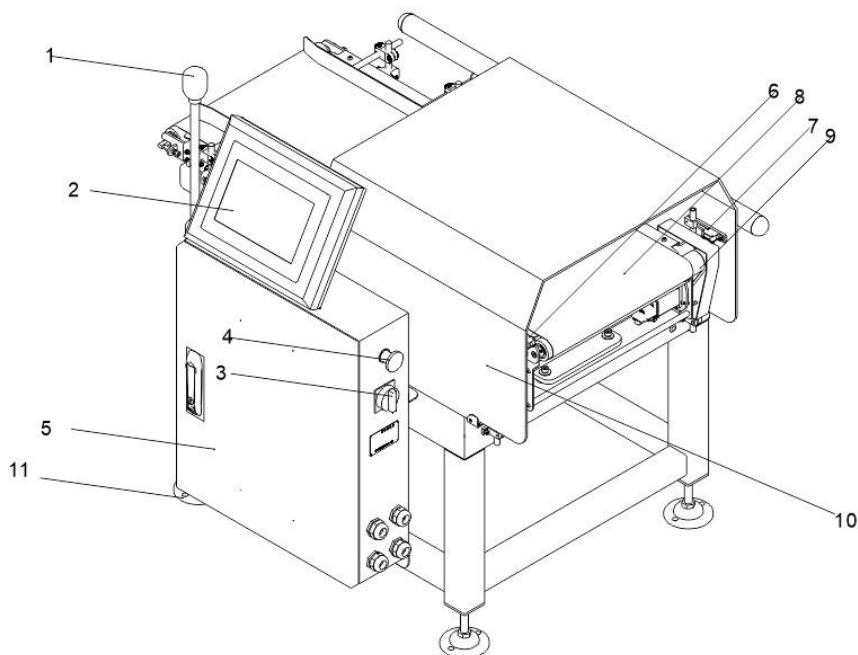


Figure 2-1 Overall appearance of the product

Serial number	Name	Introduction
1	indicator light	More intuitive display of the weight inspection results, allowing the status of the results to be seen from a distance.
2	touch screen	View display data and set product parameters
3	Knob switch	Turn on/off the power supply of the weighing scale for inspection
4	Emergency stop button	Pressing this button in an emergency situation can immediately stop the motor from running
5	Electric control panel	Control the weight inspection process and connect external devices



6	Photoelectric sensor	Judge the weight table of the object up and down
7	Photoelectric sensor targeting plate	Photoelectric sensor beam reflection
8	Weighing platform	Weighing platform for the measured object
9	Timing belt protective cover	Improving the safety of weighing scales during operation
10	protection cover	Reduce interference from external environment symmetry accuracy.
11	Peduncle	Prevent sliding and vibration of the weighing scale, and adjust the level of the weighing table.

## 2.2 Mechanical installation

Place the weighing scale at the installation place and remove the sensor protection device; Adjust the levelness of the weighing scale, and the inclination shall not exceed 0.5 degree; Fix the footing of the weighing scale, the stainless steel footing contacts the ground smoothly, and lock the screws of the footing to ensure the stability of the weighing scale.

Adjust the distance between the check weighing platform and the front and rear end conveying mechanism is 9 ~ 11mm, and the check weighing platform shall not be in contact with other equipment. If the front and back end conveying mechanism is not equal to the height, it is necessary to add the oblique conveying mechanism on one side, and add the horizontal conveying mechanism connection on the side of the oblique mechanism (to leave a gap) to check the weight scale platform, to ensure that the check weight scale platform level and the height of the front and back end conveying mechanism.

The electric control box can be arbitrarily installed on the left and right sides of the weighing scale to facilitate the operation of the production process.

## 2.3 Electrical installation

The power supply is inserted into the three-hole socket with ground or connected to the power supply equipment such as the electric gas cabinet according to the line mark.

- Any wiring and disconnecting operation can only be carried out after power off.  
After the operation is completed, check before power on.
- The serial port is fixed to RS485 communication, where the 485(A) pair should be connected to 485(A) or 485(+), and the 485(B) pair should be connected to 485(B) or

485(-).

3.The switching quantity input point is valid at low level (DC0V) and does not allow access to high voltage or alternating current.

4.Switching quantity output point access relay coil for intermediate control, so the other end of the relay can access DC or AC power supply switching quantity.

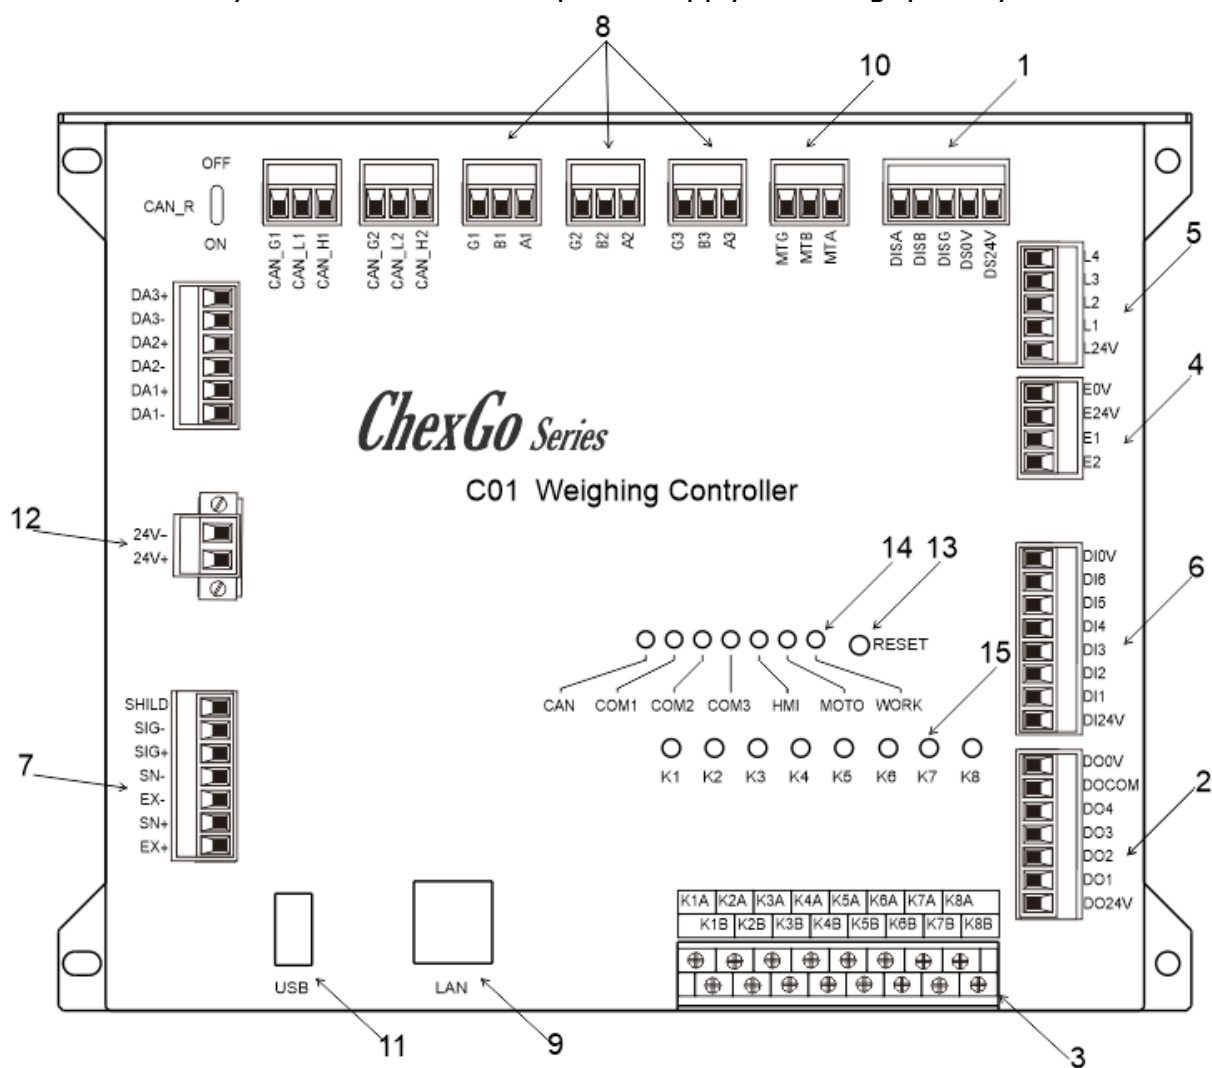


Figure 2-2 Control panel of weighing scale

Serial number	Function
1	Touch screen communication jack
2	External custom outlet OUT1-OUT4
3	External custom output relay K1-K8

4	Detect the photoelectric sensor wiring terminals
5	Alarm light wiring terminals
6	Custom input ports 1-6 externally
7	Sensor terminal
8	External RS-485 communication jack
9	External TCP/IP communication network port
10	Inverter communication jack
11	External USB data interface
12	24V power terminal
13	Reset key
14	Communication status indicator
15	Output relay status indicator light

## 2.4 Electrical interface

### **Photoelectric sensor (already wired at factory) :**

E24V: photoelectric sensor DC24V+.

E0V: photoelectric sensor DC24V-.

E1: Signal input of photoelectric sensor for loading of weighing scale.

E2: Check the output photoelectric sensor signal input of the weight balance.

### **Alarm light (has been connected when leaving the factory) :**

L24V: Alarm light DC24V+, maximum output power 2VA.

L1: Buzzer.

L2: When the detection result is out of tolerance, the low output is valid until the next check begins.

L3: When the test result is qualified, the low output is valid until the next check begins.

L4: When the detection result is inferior, the low level output is effective until the next check starts.

**Input (function can be customized, onsite connection according to actual demand) :**

DI1: running input. In the stopped state, the input is valid and the system enters the running state.

DI2: Stop input. In the running state, the input is valid and the system enters the stop state.

DI3: clear the alarm. When the system generates an alarm, change the input to be effective and the alarm will be cleared.

DI4: out-of-tolerance elimination is completed. When the input is valid, the output of out-of-tolerance elimination is invalid.

DI5: Undererror culling is complete, undererror culling output is invalid when this input is valid.

DI6: continuous packet detection. This input signal is given by the photoelectric sensor installed on the front conveyor line of the weighing scale and used in conjunction with the busy stop output to control the start and stop of the front conveyor line of the weighing scale. When there is an object being detected on the weighing platform and the signal is effective, the busy stop output is effective.

DI0V: switching quantity power supply DC24V-.

DI24V: Switching quantity power supply DC24V+.

**4 transistor outlet (function can be customized, on-site according to the actual demand connection) :**

DO1: No definition.

DO2: undefined.

DO3: undefined.

DO4: undefined.

DO0V: switching quantity supply power DC24V-.

DO24V: switch quantity power supply DC24V+.

DOCOM: switch quantity common end.

**Sensor (already connected at factory) :**

EX+ : Power positive, SN+ : induction positive, EX- : power negative, SN- : induction negative, SG+ : signal positive, SG- : signal negative.

**Motor speed control communication interface (RS485) :**

MT A: RS485 communication A.

MT B: RS485 Communications B.

MT G: RS485 Communication (GND).

**8-way relay outlet (function can be customized, on-site connection according to actual demand) :**

K1: defined as operation. When the system is in operation state, the relay output is closed, and K1A and K1B are switched on.Used to control the start and stop of frequency converter.

K2: defined as stop. When the system is in the stopped state, the relay output closes and K2A and K2B are switched on.This definition is the factory default setting and can be modified according to the actual needs.

K3: defined as out of tolerance elimination, the product test result is out of tolerance, and within the range of out of tolerance elimination duration, the relay output is closed,K3A,K3B switched on.

K4: defined as undererror elimination, the product test result is undererror, and within the range of undererror elimination duration, the output of the relay is closed,K4A,K4B on.

K5: defined as alarm. When the system gives an alarm, the output of the relay is closed, and K5A and K5B are switched on.This definition is the factory default setting, and can be modified according to the actual demand.

K6: defined as batch completion, after the completion of the product test batch, the relay output is closed,K6A,K6B on.This definition is the factory default setting, and can be modified according to the actual demand.

K7: defined as qualified indication, after the product test is qualified, the relay output is closed,K7A,K7B on.This definition is the factory default setting, and can be modified according to the actual demand.

K8: defined as unqualified excluded. When unqualified occurs in the test result, the relay output is closed, and K8A and K8B are switched on.This definition is the factory default setting, and can be modified according to the actual demand.

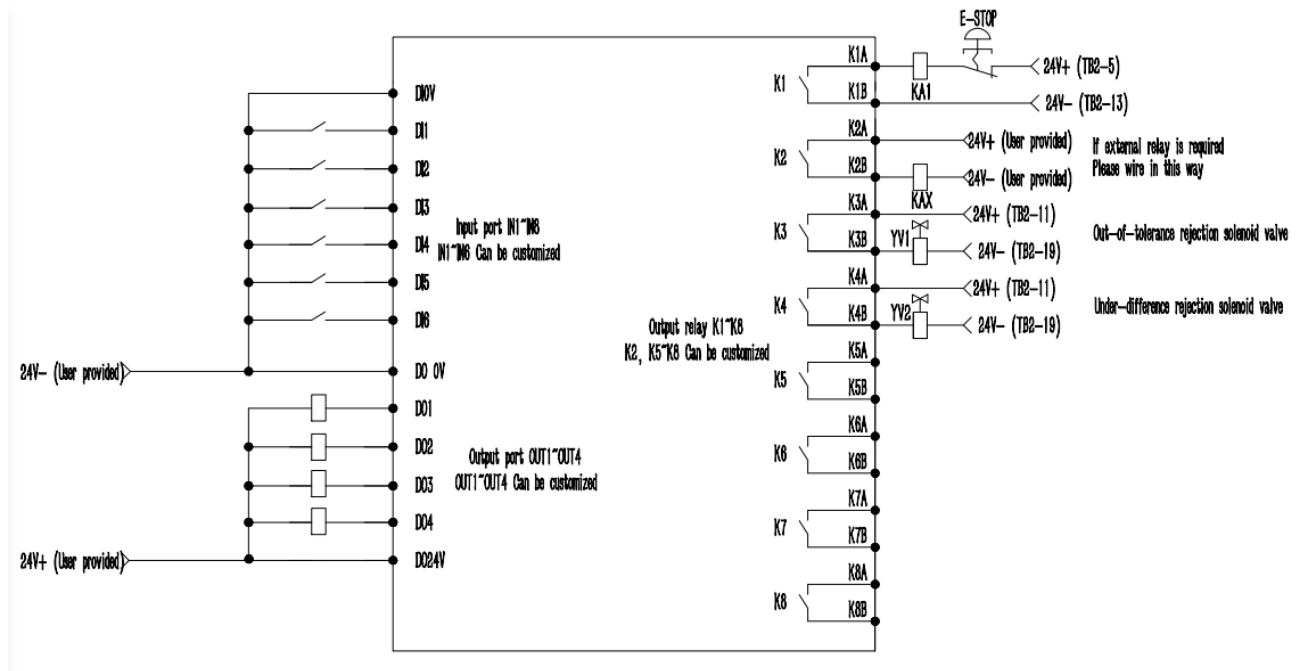


Figure 2-3 Schematic diagram of inlet and outlet connections

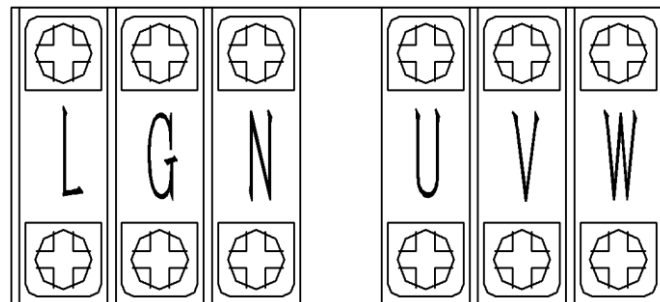


Figure 2-4 Power supply and motor interface diagram

Figure 2-4 shows the power supply and motor interface diagram, defined as follows:

**External power supply (already connected at factory) :**

L: external AC power live wire.

G: external AC power ground cable.

N: neutral wire of external AC power supply.

**Frequency converter output power supply (factory has been connected) :**

U: Corresponding to the U terminal connected to the motor.

V: corresponds to the V terminal connected to the motor.

W: corresponds to connect the motor W terminal.

Note: L, N and G are the external AC power supply, and U, V and W are the output power supply of the inverter to power the motor. These two groups of power supplies have been connected before delivery. If the frequency converter or motor needs to be reconnected in the subsequent use and maintenance process, please be sure to connect correctly according to the instructions, and remember not to connect it backwards, otherwise it will cause damage to the frequency converter.

## 2.5 Power supply power

AC220V $\pm$ 10%, 50/60Hz, 850W.

## 3. Operation

### 3.1 Operation summary

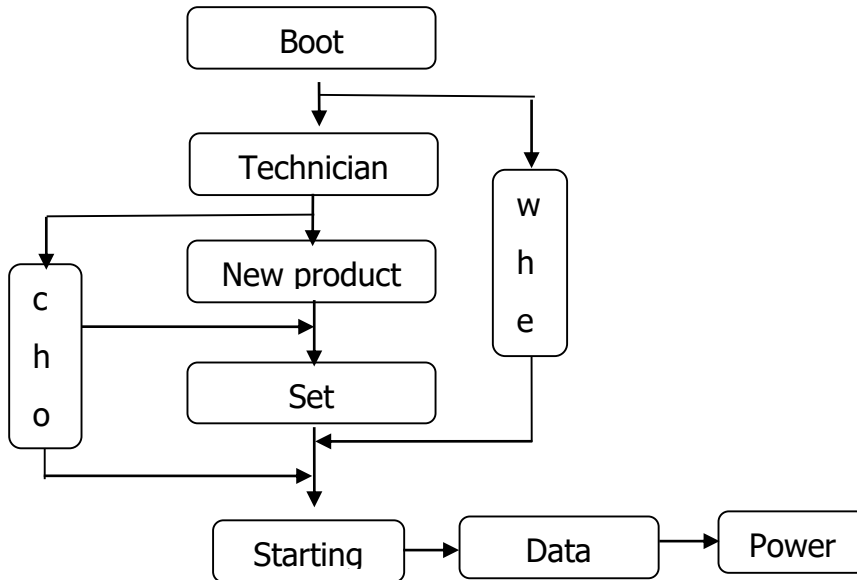


Figure 3-1 Procedure

### 3.2 Limit removal

Before use, remove the limit protection device. The arrow in Figure 3-2 indicates the limit position.

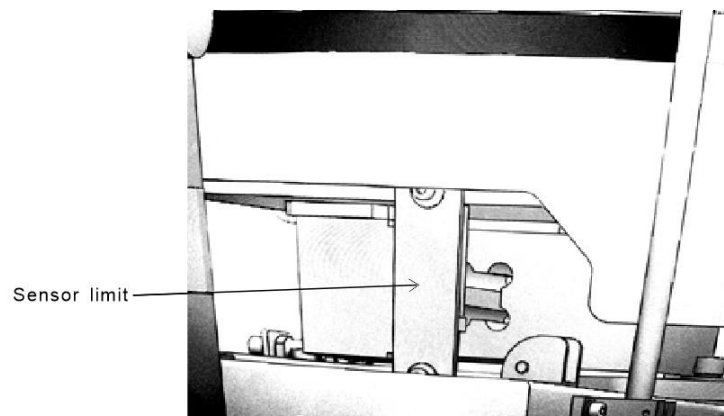


Figure 3-2 limit position

Remove the Figure 3-2 limit plate using a hex open or adjustable wrench. After removing the screws, keep them safe for packing and shipping.



### 3.3 Basic operation

The main interface of weight inspection is used for daily production, which is used to start and stop the weight inspection belt, enter the relevant parameter interface and display the basic information of the tested product and the weight inspection result.

#### 3.3.1 Power-on operation

Turn on the power and turn the knob switch to the "1" position and the boat type switch to the O position. The touch screen on the electric cabinet displays the initialization interface. At the top of the interface are USB insert mark, check scale model and time display; The black display area is the name of the current production inspection product, the weight display area, the weight unit display area and the weight check scale status display area; In the middle is the current setting of weight checking speed, the current actual weight checking speed and the display statistics of weight checking results; At the bottom are the function keys of the operation of the weight check scale and the parameters related to the weight check.

- Correct time parameters can effectively help users check the production inspection results, relevant production parameter changes and alarm information, help to improve the production pass rate and production speed and reduce production consumption.
- The weight display area of the weighing scale displays the real-time weight value in the stopped state, and displays the weight test result in the running state until the next object is effective.

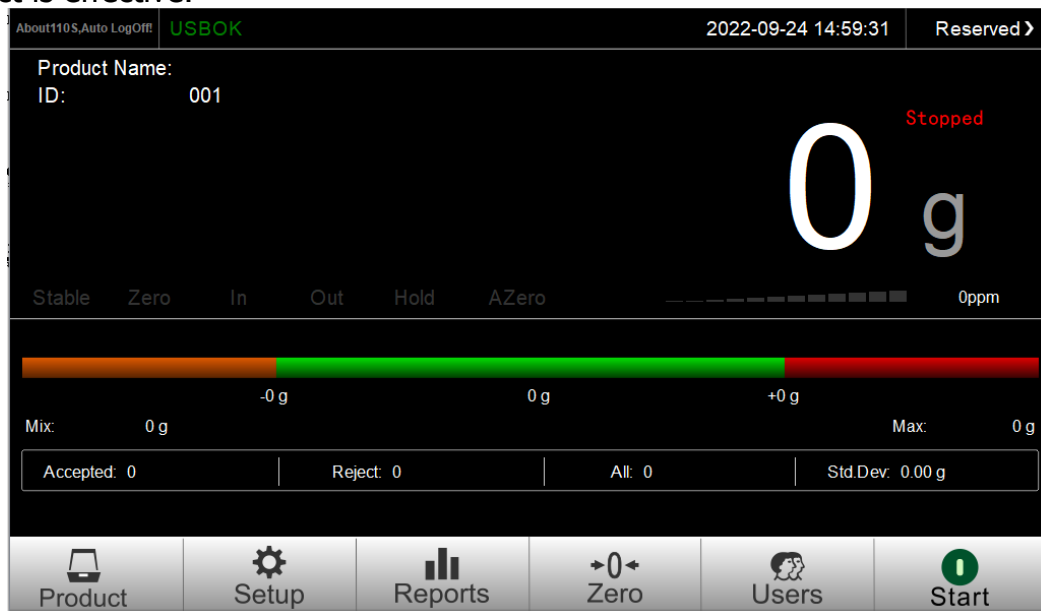




 




 



Figure 3-4 Power-on initialization interface

Button and operation frame operation instructions (applicable to all operation interfaces of the device) :

1.  Click this button to enter the interface of creating products and setting product parameters.
2.  Click this button to enter the parameter setting interface.
3.  Click this button to enter the data interface to view the relevant check data.
4.  Click this button to clear zero.
5.  Click this button for user management operations.
6.  Click this button to start and stop the device.
7.  Click this type of action box to modify the value of this item.
8.  Click the action box to modify the value of this item.
9.  Click this type of action box to select Settings for this definition.
10.  Click this type of action box to perform the corresponding operation.
11.  Click this type of action box to open and close the corresponding function Settings.

### 3.3.2 Zero clear operation

If the touch screen displays the real-time weight value of the weighing scale in the stopped state is not zero (zero indicates the off state), click "Clear zero" to clear the weighing platform, so that the real-time weight value is displayed as zero, and then the zero indicates the on state.(It can be operated only in the stopped state).

If the weight check scale shows that the weight is unchanged, the stable identifier bit is on; otherwise, the stable identifier bit is off (the stable identifier bit is only related to the weight state, and has nothing to do with the operation of the weighing scale and the size of the weight value).

### 3.3.3 Start up operation

Click "Start" on the touch screen to start the weight checking scale, and the weight checking motor drives the weight checking belt to rotate. At this time, the operation label on the touch screen is "Running", and the weight checking operation can start.

### 3.3.4 Stop operation

Click "Stop" on the touch screen to stop the weight inspection belt and end the weight inspection process. At this time, the operation label on the touch screen is "Stopped".

### 3.3.5 Power off operation

Turn knob switch to "0" position, touch screen off, disconnect power. The above operations can only be performed when there is no weight product on the weighing scale.

## 3.4 User login

Under the touch screen initial interface, click "Product" or "Settings" to pop up the password login box, select the user to enter the corresponding password and click "Confirm" to log in. The initial passwords of the operator and administrator are written in the user description.

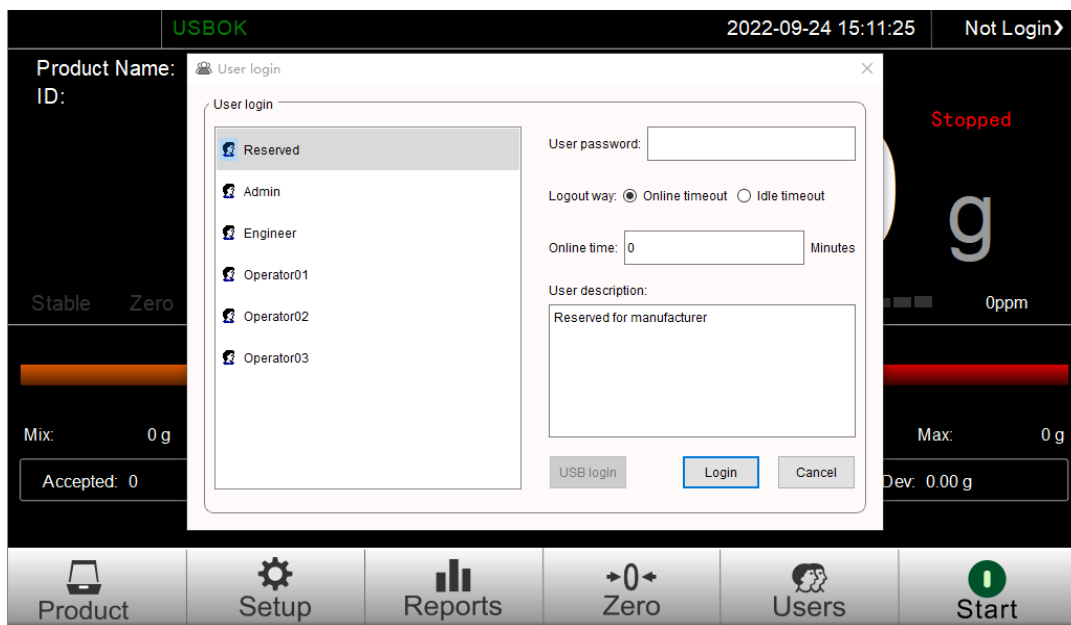


Figure 3-5 Password input box

## 3.5 Product selection with New

Product Setting						2022-09-24 15:12:05	Reserved >
ID	Product Name	Passing Speed	Standard Weight	Hi Limit	LO Limit	Curr. Product ID:	
▶ 001		000	0	0	0	001	
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		
▶ 001		000	0	0	0		

-01- -2- -03- -04- -05- -06- -07- -08- -09- -10-

Product List

Product Parameter

Dynamic Calibration

EXIT

Add Product

1  
Select Product

1  
Delect Product

Figure 3-6 Product list

### 3.5.1 Select product parameters

Click "Product" under the main interface to enter the product list interface. First, click the product to be checked in the product list, then click "Select Product" to select the product, click "Exit" to go to the main interface and click "Start" to check the product.

- After the product is successfully selected, the current number will be displayed as the number of the selected product in the upper right corner of the product list page.
- The new product number cannot be selected during the operation of the weight check scale; By default, the product number selected by the weighing scale before exit (stop operation or the weighing scale power off).

### 3.5.2 New product parameters

On the product list page, click "Add Product" to jump to the "Product Parameters" interface to add a new product parameter. The new product number will be added to the existing product in sequence. You do not need to select the product number. For details, refer to "Operation Instructions on Buttons and Operation Frames" in Section 3.3.2.

★ The new product number cannot be added during the operation of the weight check scale; The newly added product parameter values are the default initial values of the system, which need to be set according to the actual product parameters and production requirements.

Product Setting  
[? Help](#)

Product Name:  
ID: 001  
  

0

 g  
Stopped  
0gpm

Reserved >  
  
2022-09-24 15:12:44

Product ID	1	Passing Speed	0 ppm >
Product Name	<input type="text"/>	Belt Speed	0.00 m/min
Standard Weight	0 g >	Weight Correction Factor	0 >
Hi Limit	0 g >	OVER Rejector Distance	0 mm >
LO Limit	0 g >	OVER Rejector Operating Time	0.000 S >
Tare	0 g >	UNDER Rejector Distance	0 mm >
Unqualified Rejector Distance	0 mm >	UNDER Rejector Operating Time	0.000 S >
Unqualified Rejector Operation Time	0.000 S >	<a href="#">Next Page &gt;</a>	

Product List
Product Parameter
Dynamic Calibration
EXIT

Figure 3-7 Product parameters screen Example

Description of product parameters:

Name	Instructions
Product number	Number of the product under inspection
Speed of weight inspection	The speed at which the current weight checking device detects the product
Product name	Name of the product under inspection
Belt speed	Weigh the speed at which the belt is running
Standard weight	The standard weight of the product to be checked
Upper limit	In the process of weight inspection, if the weighing value is greater than the target value + the upper limit value, it will be judged as out of tolerance
Lower limit value	In the process of weight inspection, if the weighing value is less than the target value-lower limit value, it will be judged as undererror
Tare weight	The weight of the item's outer packaging
Qualified culling distance	The distance traveled by the product from the end of the scale to the start of the qualified culling mechanism

Duration of qualified culling	The duration of the qualifying cull mechanism's action
Out-of-tolerance culling distance	The distance traveled by the product from the end of the scale to the start of the offset removal mechanism
Underweight culling distance	The distance traveled by the product from the end of the scale to the start of the underbalance removal mechanism
The out-of-tolerance culling action time	The duration of the kill mechanism's action
Undershoot culling action time	The duration of the underkill operation
Unqualified culling distance	The distance traveled from the end of the scale to the nonconforming product after the start of the removal mechanism
The time of the unqualified culling action	The continuous action time of the rejection mechanism for nonconforming products (including out-of-error + undererror)
Correction factor	Standard no correction is 1000. Correction factor = $1000 + (\text{actual weight} - \text{test weight result}) / \text{min indexing}$ . That is, if the weight test result is light, the correction factor is the number greater than 1000, if the weight test result is heavy, the correction factor is the number less than 1000
Total lot	Total number of pieces of heavy product inspected
Qualified batches	Number of eligible batches of products
Sampling starting percentage	The sampling data to this percentage is discarded after the object is placed on the scale
Percentage used for sampling	Data that is consistently used as a percentage from the start of sampling is used to calculate the weight check result
Dynamic zeroing filter grade	Filtering parameters in the weighing process
Dynamic clearing stability range	When the belt is running, within the stability determination time, the weight variation range is judged to be stable within this setting value, and only when it is stable can dynamic zeroing be allowed

Dynamic zeroing and stabilizing time	When the belt is running, within this setting value, the range of weight variation is judged as the stability of the scale platform within the range of dynamic zero clearance stability. Only when the stability allows the dynamic zero clearance
Maximum sampling time	Maximum sampling time during weighing
Average feeding times	When servo control is carried out, the average value of the set number of products is compared with the user's set value, and the difference between them is used as the basis of control. When it is 0, there is no need to fill the servo function
Servo pulse frequency	The pulse frequency value of the servo motor
Number of product delays	Equivalent to the number of objects from the charging machine to the photoelectric switch of the weighing scale. Also refers to the number of products passed before the next correction
Servo charging sensitivity	This setting is the adjusted weight corresponding to each correction pulse
Servo target value	Equivalent to the target value of package inspection weight
Exclusion of servo upper limit	When the weight is higher than this value, it does not participate in the average calculation and will generate an alarm
Exclude servo lower limit	When the weight is below this value, it does not participate in the average calculation and will generate an alarm
Servo dead zone	If the absolute weight error is less than this, no correction is made
Maximum servo modulation	Means the maximum allowable modulation correction
Exclude servo upper limit alarm stop	Exclude the servo upper limit alarm to stop
Exclude the servo lower limit alarm to stop	Exclude the servo lower limit alarm to stop
Failure to correct alarm stop in time	Failure to correct alarm stop in time

### 3.5.3 Modify product parameters

On the Product list page, select the product whose parameters you want to modify from the product list and click "Product Parameters" to enter the product parameters interface to modify the selected product parameters (the newly added product directly jumps to the product parameters interface).

- The standard weight refers to the weight of the product to be checked, and the upper and lower limit is the allowable deviation value of qualified product; If it is not necessary to calculate the packaging weight of the product, the outer packaging weight of the product can be written into the tare weight column, and the net weight should be filled in the standard weight column.
- The product number is automatically generated by the system; The linear speed of the belt is calculated from the detection speed, and changes with the change of the detection speed. It cannot be filled in (the linear speed of the belt should be consistent with the linear speed of the front and rear end conveying mechanism).
- The compensation weight difference value is calculated by dynamic calibration. Under normal circumstances, manual change is prohibited to prevent deviation between the product weight and the actual weight.
- When filling in the product parameters, attention should be paid to its value range. Generally, if it is lower than the lower limit of the parameter range, the parameter value will remain unchanged; if it is higher than the upper limit of the parameter range, the upper limit of the parameter range will be written by default.
- The definition of weight checking speed, belt speed and correction coefficient is described in detail on the help interface of product parameters. If necessary, you can click "Help" to view.

### 3.5.4 Delete product parameters

On the product list page, select the product to be deleted and click "Delete Product" to delete the product. After deleting the product, the following product parameters will move forward in order, and the product number will move forward. The product cannot be deleted during the operation of the weight check scale; In order to prevent product parameters from being incorrectly deleted, the product name should be set reasonably when setting product parameters.

## 3.6 Calibration scale

In order to ensure the correct weight of the weighing scale and the linearity of the weight change, each weighing scale needs to carry out weight calibration and dynamic calibration. For specific operation methods, please refer to "Operation Instructions on Buttons and Operation Frames" in section 3.3.2.



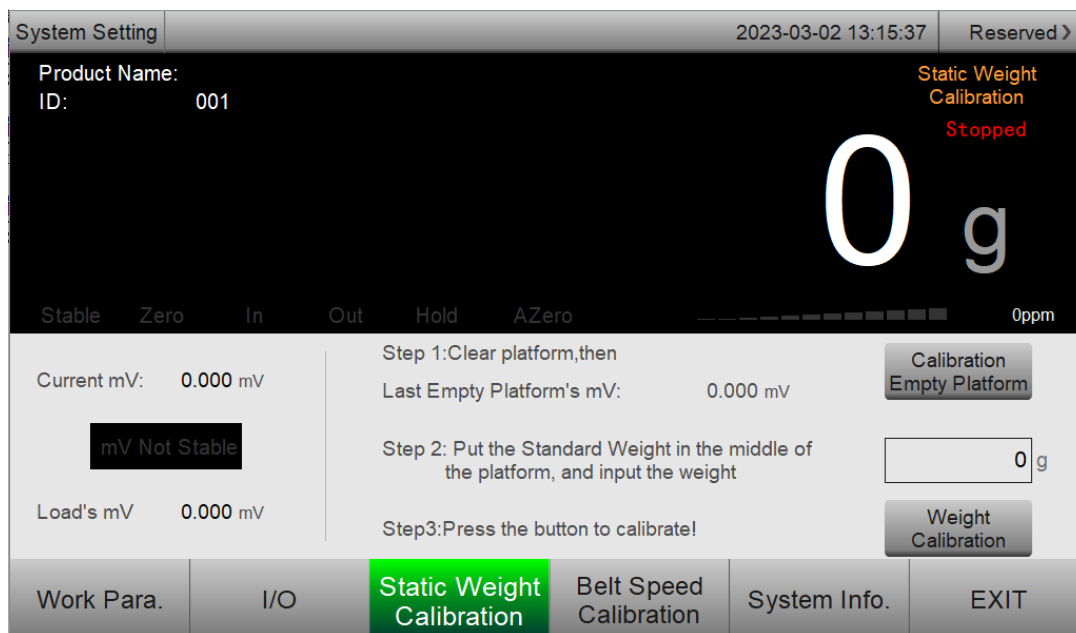


Figure 3-11 shows an example of the weight calibration interface

Description of static calibration parameters:

Name	Instructions
Calibrate the empty scale table	Eliminate external interference, the scale table at zero and stable, can be clicked
Calibrate the scale weight	Enter the weight of the calibration weight
The weight calibration scale	Put the weight on and after entering the weight of the weight, click
Current voltage value	The current voltage value of the sensor
Empty scale voltage value	The voltage value of the sensor when the top of the scale is emptied
Weight voltage value	The voltage value of the sensor after placing the weight

### 3.6.1 The weight calibration scale

In the setting page, click "Static calibration" to enter the interface of weight calibration, follow the steps on the touch screen to calibrate the scale, and click "Exit" to return to the main interface after the calibration is completed. For specific operation methods, please refer to "Operation Instructions on Buttons and Operation Frames" in Section 3.3.2.

- During calibration, ensure that the weighing scale is in the stopped state; otherwise, the interface of the weighing scale cannot be entered; Calibration should ensure that there is no item on the weighing platform, no vibration on the weighing platform, and no relatively strong air flow around the weighing scale.
- When the weighing platform is empty, ensure that the weighing platform is at zero position and stable. Otherwise, please eliminate interference and click "Calibrate the weighing platform". The second step can only be carried out when the touch screen indicator is 0 and the stability sign is lit.
- When placing the weight, try to avoid the weight hitting the surface of the weighing platform. Enter the correct weight into the weight box of the weighing platform, otherwise it will lead to inaccurate calibration scale or calibration failure (the weight of the weighing platform should be greater than the product weight and not exceed the maximum range of the weighing scale).
- If the calibration fails, please check whether the scale is stable and whether the sensor is interfered by the outside world or whether the scale is in contact with other equipment, and re-calibrate after troubleshooting.

### 3.6.2 Dynamic calibration of scale

On the product page, click "Dynamic calibration" to enter the dynamic calibration interface, and perform dynamic calibration according to the text prompts. When completed, relevant parameters will be automatically calculated and generated and product parameters will be written. Click "Exit" to return to the main interface after completion of calibration. For details, please refer to Section 3.3.2 "Operation Instructions for Buttons and Operation Frames".

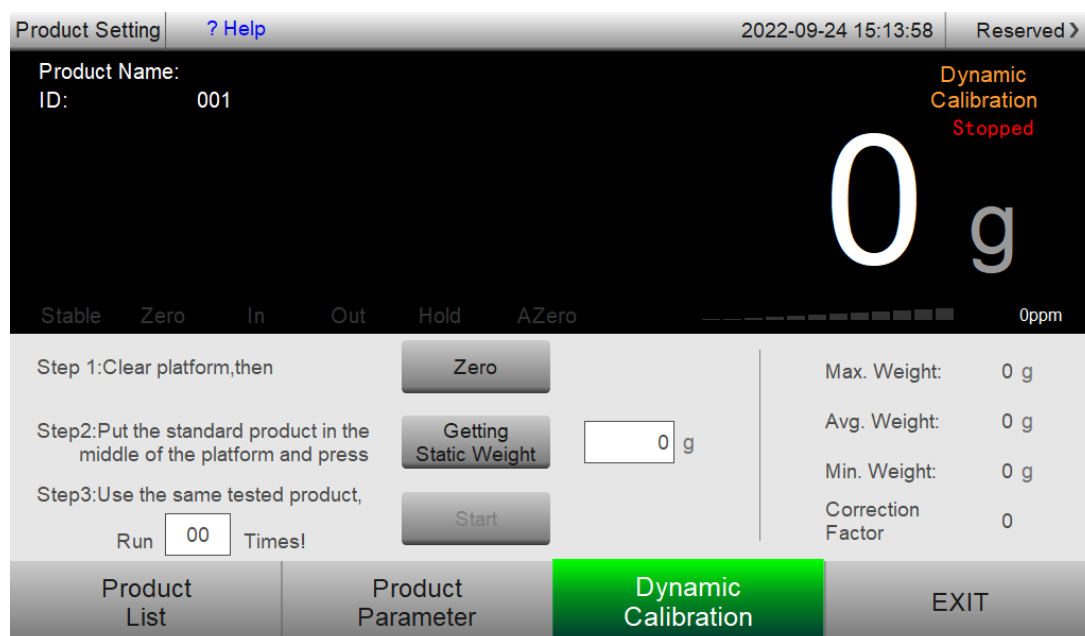


Figure 3-12 Dynamic calibration screen example

Description of dynamic calibration parameters:

Name	Instructions
Zeroing	Clear the current weight value to zero
Get the weight	Stop the belt running and put the test material on after the static weight value shown
Dynamic calibration times	The number of repeated runs of dynamic calibration. The default is ten, and no less than five are recommended
Start up	The belt will run, and after the statically weighed object has passed, it should be moved back to the front stage, repeatedly running dynamically, and the controller will automatically record the dynamic weight. General dynamic calibration ten times, the number of dynamic calibration to check the weight scale will automatically stop
Maximum weight	The maximum value of the weight check result during dynamic calibration
Average weight	During dynamic calibration, the average weight of each check will be updated after the number of dynamic calibration is completed
Correction factor	<p>The standard value is 1000. After the number of dynamic calibration is completed, the controller will automatically calculate this value according to the dynamic result and static weight.</p> <p>If it is not convenient for dynamic calibration, you need to enter this value manually, which can be set in the product parameter interface, and fill in the size of the value refer to the method in the dynamic calibration parameter help interface</p>

- Calibration must ensure that the check scale in the stopped state, otherwise can not enter the dynamic calibration interface;When calibrating, ensure that there is no item on the scale, no vibration on the scale, and no relatively strong air flow around the scale.
- When the weighing platform is empty, it should be ensured that the weighing platform is at zero position and stable, otherwise, please eliminate external interference and carry out "zero clearing" operation.
- When placing the product, the product should avoid hitting the surface of the weighing platform. Only after the weight is stable can you click "Obtain static weight";If the product has a gross weight value, please set the gross weight value first before

dynamic calibration.

- The default value of learning times is 10. If the learning result is not accurate, you can increase the learning times appropriately. If the production requirement is not high, the learning times can be appropriately reduced to improve the learning speed; External interference should be avoided in the learning process, and the system will automatically save the learning results and display them after the completion of learning.
- The change of product detection speed requires dynamic calibration again.
- The principle of dynamic calibration, attention to implementation and alternative methods are introduced in detail in the interface of dynamic calibration parameter help. If necessary, you can click Help to view.

## 4. Data viewing

This check weight scale has data storage and query function, convenient for users to check the historical check weight data and event information. Under the main interface, click "Data" to enter the interface for viewing data (no permission is required for data interface).

### 4.1 Check the result data

In this interface, you can view the weight check time, weight check result and product code. When the weight check scale stops, insert the USB disk into the touch screen and click "Export data" to export all the weight check data to the USB disk; Click "Delete data" to delete all the current weight data; Click "Next page" or "Previous page" to review the duplicate data (in running state, only the duplicate data can be viewed, and the operation of "Export data" and "delete data" cannot be performed). For specific operation methods, please refer to "Operation Instructions on Buttons and Operation Frames" in Section 3.3.2.

- After testing a certain number of products, you can insert the USB flash drive to the touch screen to export the existing weight data, otherwise too much weight data will cause inconvenience to data query.
- Changing the production of the product and adding new products will not affect the query of the test result, delete the product, please first check out the test result and clear.

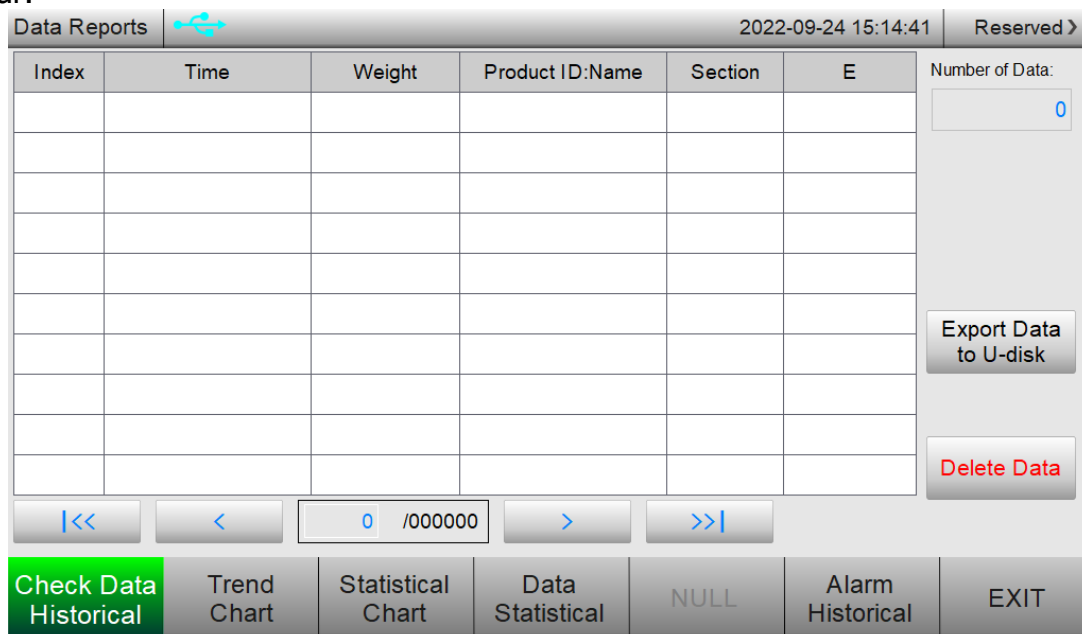



Figure 4-1 Example of the weight check data page

### 4.2 Statistics

Click "Statistics Data" to enter the check weight data statistics interface, which displays product distribution intuitively. Click "Print data" to print statistics information, click "Export

data" to export statistics information to the USB disk inserted into the touch screen, click "Delete data" to clear statistics information. For specific operation methods, refer to "Operation Instructions on Buttons and Operation Frames" in Section 3.3.2.

- Statistics include out of tolerance, under tolerance, the cumulative number of inspection times of qualified products, weight, average value and probability distribution, etc.
- Before testing a new batch of product, the previous statistics should be cleared, otherwise the new product will accumulate on the original statistics and generate incorrect statistics.

Data Reports 
2022-09-24 15:15:26
Reserved >

Product Name:

Standard Weight: 0 g

ID: 1

Tare: 0 g

Items	Total of Number	totals of Weight	Avg. Weight
Total:	0	0 g	0 g
Qualified:	0	0 g	0 g
OVER:	0	0 g	0 g
UNDER:	0	0 g	0 g
Unqualified:	0	0 g	0 g
Untreated:	0		

Qualify Rate: 0.00%

Max. Weight: 0 g

Min. Weight: 0 g

Check Data Historical

Trend Chart

Statistical Chart

Data Statistical

NULL

Alarm Historical

EXIT

Print Data

Export Data to U-disk

Delete Data

Figure 4-2 An example of the statistics page

### 4.3 Alarm information

Click "alarm record" to enter the interface for viewing alarm records, and you can view the alarm information in the process of weight inspection, including alarm serial number, alarm time, number and alarm content. For specific operation methods, please refer to "Operation Instructions of Button and Operation Frame" in Section 3.3.2.

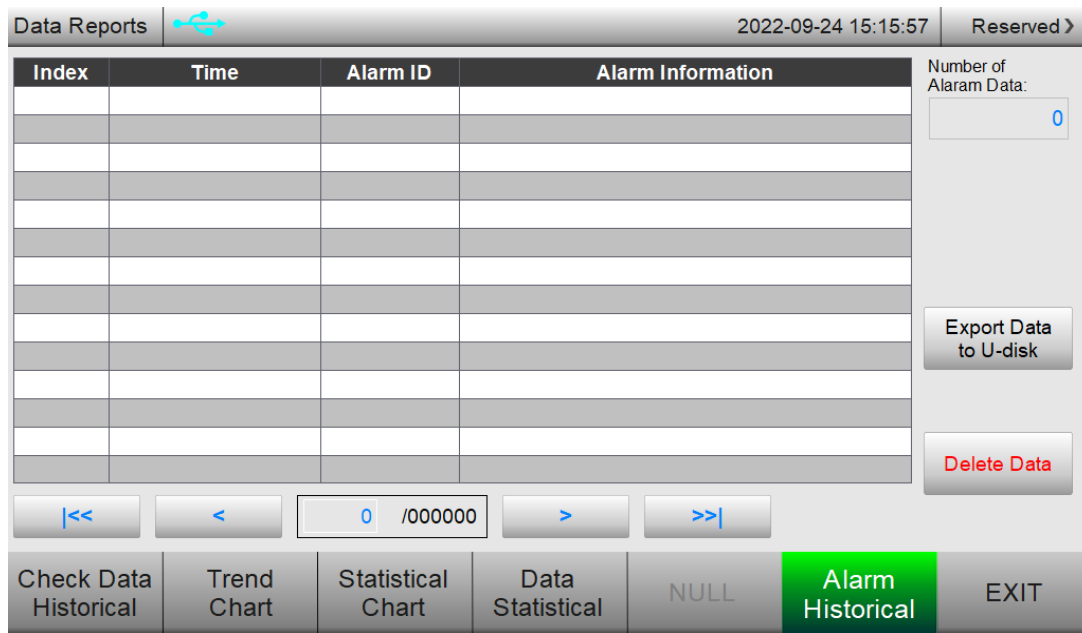


Figure 4-3 Alarm information screen example

## 4.4 Statistical graph

Click "Statistical Chart" to enter the statistical chart interface to visually view the product weight distribution.


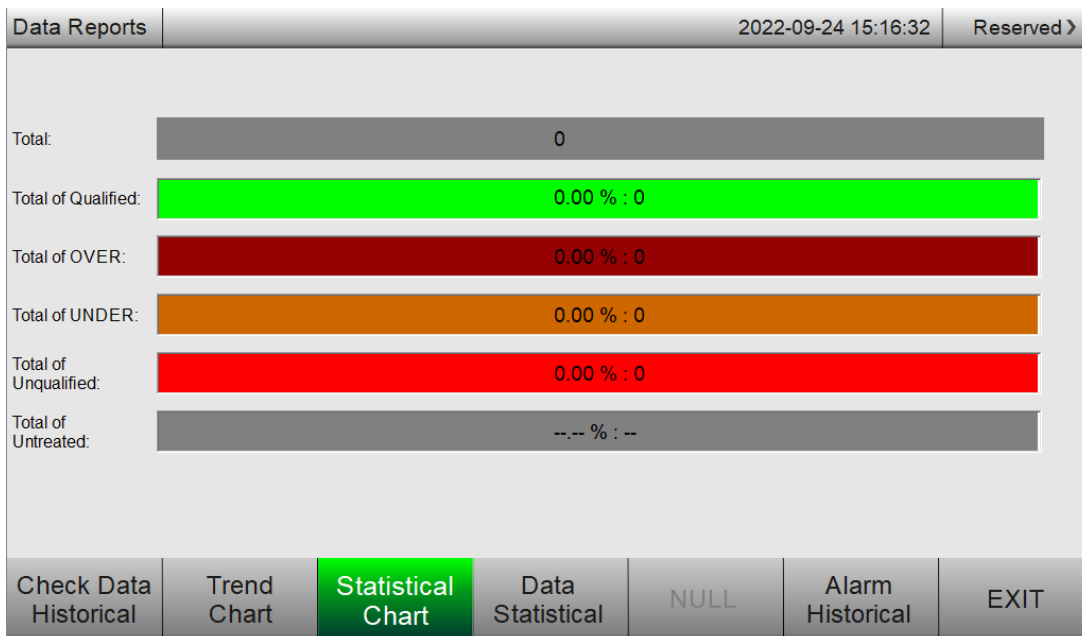


Figure 4-4 Example of the statistical chart interface

## 5. Quantity of switches
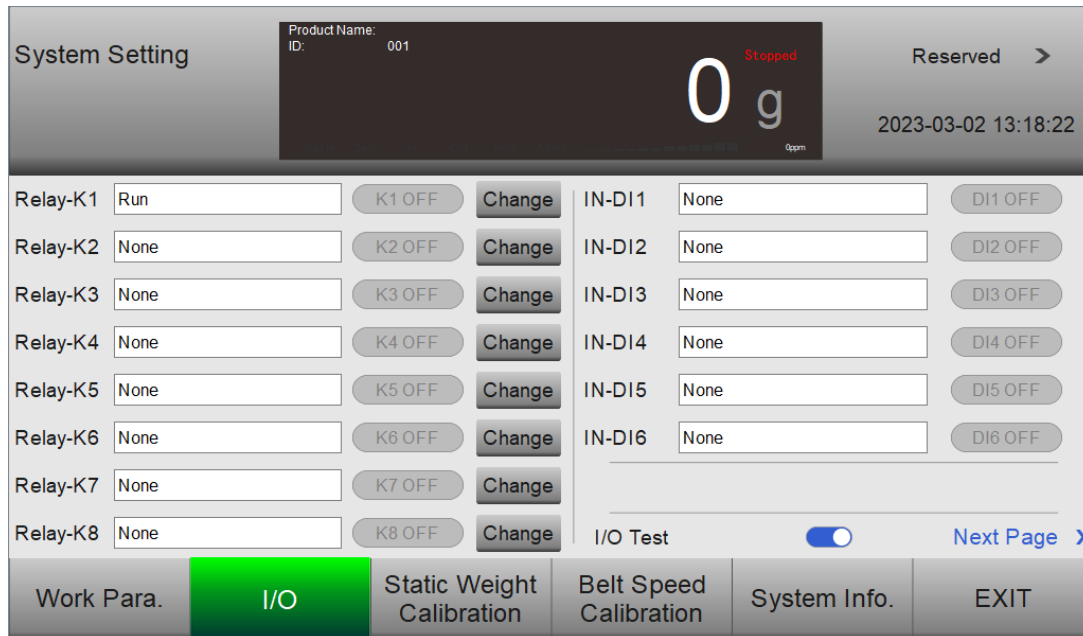
### 5.1 I/O I/O testing



System Setting

Product Name: 001

0 g

Reserved >


2023-03-02 13:18:22

Relay-K1	Run	K1 OFF	Change	IN-DI1	None	DI1 OFF
Relay-K2	None	K2 OFF	Change	IN-DI2	None	DI2 OFF
Relay-K3	None	K3 OFF	Change	IN-DI3	None	DI3 OFF
Relay-K4	None	K4 OFF	Change	IN-DI4	None	DI4 OFF
Relay-K5	None	K5 OFF	Change	IN-DI5	None	DI5 OFF
Relay-K6	None	K6 OFF	Change	IN-DI6	None	DI6 OFF
Relay-K7	None	K7 OFF	Change			
Relay-K8	None	K8 OFF	Change			

I/O Test ☒ Next Page >

Work Para. I/O Static Weight Calibration Belt Speed Calibration System Info. EXIT

Figure 5-1 I/O parameter screen Example 1



System Setting

Product Name: 001

0 g

Reserved >

2023-03-02 13:19:28

OUT-DO1	None	DO1 OFF	Change	E-1	Input Photoelectric Sensor	E1 OFF
OUT-DO2	None	DO2 OFF	Change	E-2	Output Photoelectric Sensor	E2 OFF
OUT-DO3	None	DO3 OFF	Change			
OUT-DO4	None	DO4 OFF	Change			

3-Colors Buzzer Lamp

Red OFF Green OFF Yellow OFF Buzzer OFF Change

< Previous Page

I/O Test ☒

Work Para. I/O Static Weight Calibration Belt Speed Calibration System Info. EXIT

Figure 5-2 I/O parameter screen example 2

Click "Switch quantity" on the setting page to enter the IO test interface. The system provides 6 input terminals and 12 output terminals, which users can decide whether to use



according to production requirements. For specific operation methods, please refer to "Operation Instructions on Buttons and Operation Frames" in Section 3.3.2.

IO test is to test whether the IO port is properly connected to the external device. During the test, click "Switch" after the output to output 1-8. If the corresponding relay coil is closed (red indicator light on the relay base) and the corresponding device is in action, the connection is normal and the output point of the weighing scale is valid; otherwise, please check whether the connection between the output point and the device is correct; Click the "switch" behind the three-color light, if the three-color indicator light is on, the connection is correct.

The input test can be carried out by setting the low level signal (DC0V) at the input end. If the low level signal is effective at the corresponding input port, the test indicator box behind the corresponding input point ON the touch screen will light up and display "ON" (The photoelectric input can be blocked on the main interface when testing the photoelectric input, if the corresponding input and discharge marks are lit up, the photoelectric input is effective). The input and output signals can be defined by themselves.

The default switching quantity is defined as follows:

Enter the port number	Definition	Output port number	Definition
DI1	Run	Relay - K1	Run
DI2	Stop	Relay - K2	Stop
DI3	Clear alarm	Relay - K3	Out-of-error culling
DI4	Aberration culling complete	Relay - K4	Undercount culling
DI5	Owe culling complete	Relay - K5	Alarm
DI6	Packet detection	Relay - K6	Number of batches completed
E1	I1 (incoming photoelectric sensor)	Relay - K7	Qualified indication
E2	I2 (discharge photoelectric sensor)	Relay - K8	Disqualified cull

		DO 1	Undefined
		DO 2	Undefined
		DO 3	Undefined
		DO 4	Undefined
		L 1	O17 (Buzzer alarm output)
		L 2	O7 (alarm light out-of-tolerance indication, no relay)
		L 3	O10 (alarm light qualified indication, no relay)
		L 4	O6 (alarm light undererror indication, no relay)

List of definable switching quantities:

Enter switch quantity:

Number	Name	Function description
<b>I00</b>	Undefined	No function when this item is selected.
<b>I01</b>	Input photoelectric	When the input is valid, it means that the input photoelectric sensor has sensed the measured object
<b>I02</b>	Output photoelectric	When the input is valid, it means that the output photoelectric sensor has sensed the object under test
<b>I03</b>	Run	When the input is valid, the device will boot into the running state
<b>I04</b>	Stop	The device will stop running when the input is valid
<b>I05</b>	Clear alarm	When the input is valid, the device will clear the current alarm
<b>I06</b>	Aberration cull complete	When the input is valid, the offset cull is complete
<b>I07</b>	Owe culling complete	When the input is valid, the underbalance culling has been completed
<b>I08</b>	Packet detection	When the input is valid, the device performs packet connection detection

<b>I09</b>	Belt speed detection	
<b>I10</b>	Run/stop [level]	Control device operation or stop by level signal
<b>I11</b>	Run/stop [edge]	When the device is in the stopped state, the signal input is effective, the device starts to enter the running state;  When the signal input is effective, the device stops running;
<b>I12</b>	Stop (level)	The signal is valid and the touch screen cannot start the device

Output switching quantity:

Number	Name	Function description
<b>000</b>	Undefined	No function when this item is selected.
<b>001</b>	Out-of-tolerance indication	If the weight check result is out of tolerance, the output is valid and continues until the next weight check is completed.
<b>002</b>	Owe indication	If the weight check result is underweight, the output is valid and lasts until the next weight check is completed.
<b>003</b>	Run	Run status output is valid.
<b>004</b>	Stop	The stopped state output is valid.
<b>005</b>	Alarm	Output is valid when alarming.
<b>006</b>	Out-of-order culling	The weight check result is out of tolerance, according to the set out of tolerance eliminator distance delay, and then according to the set duration output valid.
<b>007</b>	Owe culling	The weight check result is the undererror, according to the set offset culler distance delay, and then according to the set duration output valid.
<b>008</b>	Disqualified culling	The weight inspection result is out of tolerance or undertolerance, according to the set distance delay of the unqualified eliminator, and then according to the set duration output effective.
<b>009</b>	Number of batches completed	This output is valid when the set number of batches is reached.

<b>O10</b>	Qualifying instructions	If the weight check result is underweight, the output is valid and continues until the next weight check is completed.
<b>O11</b>	Busy Stop + communication	When the system is in busy state, busy detection is valid, this output is invalid, busy state is invalid and communication command is received, this output is valid, busy detection is invalid, this output is valid
<b>O12</b>	Busy stop	When the system is in busy state, busy detection is valid and this output is invalid, busy state is invalid, this output is valid, busy detection is invalid, this output is valid
<b>O13</b>	Feed photoelectric output	According to the state of the input photoelectric output, the input photoelectric effective, then the output effective.
<b>O14</b>	Discharge photoelectric output	According to the state output of discharge photoelectric, discharge photoelectric is effective, then the output is effective.
<b>O15</b>	Speed up pulse	Servo feedback function
<b>O16</b>	Deceleration pulse	Servo feedback function
<b>O17</b>	Buzzer alarm output	Output in different ways depending on your choice
<b>O18</b>	Qualified Cull	

## 6. Working parameters

### 6.1 Working parameter Settings

Click "Set" to enter the interface of working parameters, and the user can decide whether to open according to the production needs. If the corresponding alarm is generated after opening, the weight checking scale will automatically alarm or alarm stop. It needs to manually click "clear alarm" or input the signal of "clear alarm" to start the weight checking again (after the alarm is generated and until the clear alarm is completed, The motor of the check weighing scale runs but does not determine whether the object is on or off the weighing platform, nor does it carry out weighing operation), and the alarm information is stored in "Data" - "Alarm information".For specific operation methods, please refer to "Operation Instructions of Button and Operation Frame" in section 3.3.2.

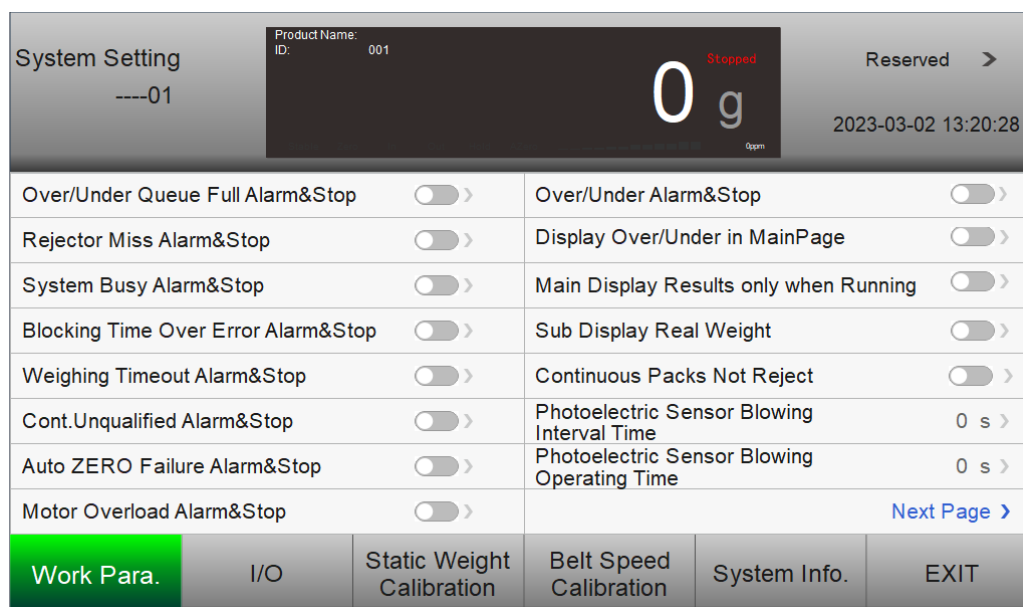


Figure 6-1 Working parameters screen example

Analysis of working parameters:

Name	Instructions
The alarm stops when the queue is full	The default number of over/under error queue is 20, which means that if the removal distance is long enough, that is, it takes a long time for the products to be removed to arrive at the removal institution, there can be more than 20 products in the middle. If there are more than or equal to 20 over/under error products to be removed in this distance, it will alarm and stop

If not eliminated in time, the alarm will be stopped	After the next unqualified product has gone through the reinspection process, the last product has not been removed, the alarm will be stopped
Busy alarm stop	In the last product has not been out of the inspection belt, the next product into the inspection belt, it will show busy alarm and stop.If the back end is connected with an over and under error elimination mechanism, the default is over error elimination
The time of overplugging will alarm and stop the machine	Indicates that if the discharge photoelectric induction continues, and exceeds the plugging time set in the system parameter interface, it will alarm and stop
If the maximum time on the scale is exceeded, it will alarm and stop	There are two kinds of action;1. If the maximum time on the scale set on the touch screen is more than 2 times of the time required for the object to pass the scale, the maximum alarm time on the scale is twice of the time required for the object to pass the scale. 2. If the maximum time on the weighing platform set on the touch screen is less than or equal to twice the time required for the object to pass the weighing platform, the maximum alarm time on the weighing platform is the maximum time on the weighing platform set on the touch screen
The number of consecutive unqualified alarms	The number of consecutive failed alarms
The number of super continuous nonconformance alarm stops	In the product parameter setting interface, you can set the alarm number of continuous nonconformance. If the set value is not zero and the switch is on, the number of continuous nonconformance will alarm and stop when it reaches this value
Upper limit of motor load	The maximum load the motor can withstand

Stop above the motor load limit	The upper limit of motor load can be set in the system parameter interface of the product. When the weight of the product or the object to be weighed exceeds the set upper limit, it will alarm and stop
Overweight or underweight alarm and stop	Display on the main page that the result of this test product is out of tolerance or under tolerance and the device will stop.If you need to use this function, you need to move forward the discharge photoelectric position, please contact our technical department for details
The main page displays the information of overshoot and undershoot	On the main page, it shows that the result of this test is out of tolerance, under tolerance, or qualified
The main page will display only the weight test result	Only the product weight test result of this test is displayed on the main page
Auxiliary display of real-time weight	Display the detected real-time product weight on the main page
Units	g/kg/t Optional
Minimum indexing	0.001. 0.002. 0.005. 0.010. 0.020. 0.050 Optional
Check scale for stability range	When calibrating the scale, the weight variation range is judged to be stable within this setting value
Judge the range of stability;	During the stabilization time, the range of weight variation is judged to be stable within this setting value
Zero tracking range	Weight value within this range, automatically clear zero
Clear range	The range at which the scale table is zeroed out during weighing

Automatic zeroing at startup	Perform zero clearing once the scale platform is started
Check the maximum judgment time of the scale	Is the longest judgment time in the process of weight calibration, indicating that the weighing platform must be stable and the zero voltage must be within the limited range during the calibration of the empty weighing platform and the weight calibration process. If the above conditions are not met and the maximum judgment time is exceeded, the alarm will be given and the weighing will fail
Decimal point	0 0.0 0.00 0.000 0.0000 Optional
Maximum range	6KG
Check scale for stability time	When checking the scale, the range of weight variation is judged to be stable within the stability range of the scale
Stabilizing time	Within this setting, the range of weight variation is judged to be stable within the range of stability
Zero tracking time	During this time, the system data drift does not exceed the zero tracking range
The system automatically clears zeros after power-on	Zero clearing operation will be performed once on the scale platform
Feed to shake time	Do not sample during this time after feeding
Time to remove shaking from material	Do not sample during this time before discharging
Length of scale table	800mm
Maximum time on the scale table	Maximum time an item is on the scale
Material blocking time	From the discharge photoelectric induction to the material time, more than this time alarm



Dynamic zero clearance range	Range of zeroing of the weighing platform during the weight checking process
Digital filtering level	0 to 9 can be set
AD sampling rate	120 beats per second 240 beats per second 480 beats per second
Pre-filter grade	0 to 20 optional
Time between photoelectric dust removal	When the system runs to the set value, the photoelectric dust removal begins
Duration of photoelectric dust removal	The output time of the photoelectric dust removal switch
Buzzer buzzer type	There are four types to choose from, which are undererror, out-of-error, unqualified, and qualified
Buzzer sounding mode	There are three ways to choose from, long buzzer, off, and delay
Buzzer delay time	The delay time is 0.000-10.000S
When the overgap is not suspended, the pop-up window will alarm	When the overgap is not suspended, the pop-up window displays the alarm information
The over and under alarm is included in the alarm record	The over and under alarm is included in the alarm record

## 7. Communication

The product has RS485 and optional network port for external communication. The communication protocol is standard Modbus RTU, and the network port communication includes Modbus TCP/IP and HTTP. When the communication mode is printed, RS485 can be connected to the printer for printing output. For detailed operation methods, refer to "Operation Instructions on Buttons and Operation Frames" in section 3.3.2.

### 7.1 Communication parameters

Click "Setting" to enter the interface of working parameters, and then click the next page, the user can set the relevant serial port communication mode, to realize the communication between the weighing scale and the host computer and other external control units or connect the printer.

System Setting  
----02

Product Name:  
ID: 001

0 g

Stopped

Reserved >

2022-09-24 15:19:02

<a href="#">&lt; Previous Page</a>			
COM1 Mode	Modbus-RTU >	COM2 Mode	Modbus-RTU >
Slave ID	000 >	Slave ID	000 >
BAUD	9600 >	BAUD	9600 >
Byte Format	8-E-1 >	Byte Format	8-E-1 >
DWord Data Format	AB-CD >	DWord Data Format	AB-CD >
		<a href="#">Next Page &gt;</a>	

Work Para.

I/O

Static Weight Calibration

Belt Speed Calibration

System Info.

EXIT

Figure 7-1 Communication parameters interface Example 1

System Setting  
----03

Product Name:  
 ID: 001  

0

 g  
Stopped  
0ppm

Reserved >  
 2022-09-24 15:19:50

< Previous Page

COM3 Mode	Modbus-RTU >
Slave ID	000 >
BAUD	9600 >
Byte Format	8-E-1 >
DWord Data Format	AB-CD >

LAN Mode

Modbus-TCP/IP >

IP	<div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">0</div> . <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">000</div> . <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">000</div> . <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">000</div>
Port	0 >
LAN MAC	<div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">0</div> <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">0</div> <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">0</div> <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">00</div> <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">00</div> <div style="border: 1px solid #ccc; padding: 2px 5px; display: inline-block;">00</div>

[Next Page >](#)

Work Para.

I/O

Static Weight  
Calibration

Belt Speed  
Calibration

System Info.

EXIT

Figure 7-2 Communication parameters screen Example 2

Description of communication parameters:

Name	Instructions
Serial communication method	Modbus-RTU
Mailing address	The address of the current device
Baud rate	Baud rate for current device communication
Byte format	The byte format of the current device communication. Default 8-E-1
High and low bytes	Bytes of current device communication. Default AB-CD
Network port communication mode	Network port communication mode
IP address	IP address for current device communication
Port number	Port number for current device communication
MAC address	MAC address for current device communication

### 7.1.1 Serial port communication

The weighing scale is configured with three serial ports, which can communicate with the host computer through RS485 serial ports. The optional functions are Modbus-RTU and print mode (serial port three can only be set as print). The data format 7-E-1 is fixed as print, and Modbus-RTU communication cannot be carried out.

Serial number	Range	Instructions
Mailing address	1 to 245	Check the weight scale slave number
Communication method	Modbus-RTU, print	Communication Modes and functions
Baud rate	9,600, 19,200, 38,400, 57600 and 115,200	Communication data transfer speed
Data format	7-E-1(Print), 8-e-1, 8-n-1.	Communication transmission data Format
High and low bytes	High word first or low word first	Facilitate communication of various upper computers

When the host computer communicates with multiple weighing scales at the same time, the code of each weighing scale device cannot be consistent, and the maximum value is 245 (that is, a single PC can be connected to 245 weighing scales at the same time).

### 7.1.2 Network port communication

The weighing scale can communicate with the host computer through a 10M/100M adaptive network port. The optional functions are Modbus TCP/IP and HTTP protocol. Parameter setting requirements are as follows:

Serial number	Instructions
IP	The upper computer and the motherboard must be in the same network segment and not equal
Port number	Range 0-65535, usually set to 502 for slave
MAC address	The address of each device cannot be repeated and is set before delivery

HTTP works in server-side mode, and the protocol is as follows:

- 1 Send: http://IP,  
Return: current weigh value (screen display value).  
For example:  
Send to: http://192.168.61.223  
Return: 123.456kg
- 2 Send:  
http://IP/szgmt.html  
Return: Current weighing value (screen display value).  
For example:  
Send: http://192.168.10.15/szgmt.html  
Return: 123.456kg
- 3 Send:  
http://IP/cwrf.html  
Return: Current weigh value (screen display value), new weigh data identification.  
For example:  
Send: http://192.168.10.15/cwrf.html  
Return: 123.456kg0 (This value changes from 0 to 1 or from 1 to 0 when there is a new check result)
- 4 Send:  
http://IP/crf.html  
Return: New weigh data identification.  
Example:  
Send to: http://192.168.10.15/crf.html  
Return: 1 (change the value from 0 to 1 or from 1 to 0 when there is a new check result)

### 7.1.3 MAC address

The MAC address is the physical address of the weighing scale and cannot be modified. It represents the identification number of the weighing scale.

## 7.2 The Modbus register communication address is defined

PLC address	Module address	Parameter definition	Remarks	
Home screen status (Support function code 0x03)				
40001	0000	Module current status 1	. 0	1: Weight positive overflow
			1.	1: The sensor is overflowing

			2.	1: Weight negative overflow
			3.	1: Negative sensor overflow
			4.	1: Weight plus or minus identifier bit 0: plus 1: minus
			5.	1: zero point identifier bit
			6.	1: Stabilize the identifier bit
			...	reserve
			12.	1: Static calibration state
			13.	1: Zero point calibration is successful
			14.	1: Gain calibration is successful
			15.	Reservations
<b>40002</b>	<b>0001</b>	Module current status 2	0.	1: Run 0: Stop
			1.	1: Upper limit (for indication)
			2.	1: Lower limit (for indication)
			3.	1: Qualified (for indication)
			4.	1: out of tolerance (for culling)
			5.	1: Underbalance (for culling)
			6.	1: Qualified
			7.	1: Busy (for indication)
			8.	1: IO test
			9.	1: Belt calibration
			10.	1: Dynamic calibration
			11.	1: Feed
			12.	1: Discharge
			13.	1: Keep

			14.	1: Return to zero
			...	reserve
40007	0006	Weight value	Stop status: real-time weight;Running state: weight check result	
40008	0007			
40539	0538	Out-of-tolerance ratio		
40540	0539			
40541	0540	Underdifference ratio		
40542	0541			
40551	0550	Error number	.0 Over and under queue is full	
			.1 Busy alarm	
			.2 Not reject in time	
			.3 Continuous failure alarm	
			.4 Total batch alarm	
			.5 Qualified batch alarm	
			.6 Exceed blocking time	
			.7 Below minimum sampling time	
			.8 Exceed Maximum time on the weighing platform	
			.9 Motor load limit exceeded	
			.10 Automatic zero failure alarm	
			.11 Zero out-of-range alarm	
			.12 Zero unstable alarm	
40552	0551		.13 Over alarm	
			.14 Under alarm	
			.15 Eliminate servo upper limit alarm	
		.16 Eliminate servo lower limit alarm		

			.17 Last correction was not completed and the next correction entered.
			.18 Reserved
40563	0562	Actual weight check speed	The number of products that actually pass the checkweigher in one minute during the product weighing process
40564	0563		
Product parameters (Function codes 0x03, 0x10 supported.)			
40101	0100	Product number	Read: Currently selected product number;Write: Write needs to select the product number and update to write value after writing
40102	0101		
40103	0102	Product weight	Static weight of the product to be checked
40104	0103		
40105	0104	Upper limit	Allowable upper deviation of product conformity
40106	0105		
40107	0106	Lower limit	The permissible lower deviation of product conformity
40108	0107		
40109	0108	Pack weight	Package weight that is weighed with the product but does not count towards the result
40110	0109		
40111	0110	Checking speed	Initial value:25 Range: 0~100 Unit: Pieces/Min
40112	0111		
40205	0204	Power-on auto zero switch	Initial value:1 Range: 0~1
40206	0205		
40215	0214	Total Batch	Quantitative production inspection weight total production;0 ~ 999999pcs
40216	0215		
40217	0216	Qualified Batch	Quantitative production of qualified products;0 ~ 999999pcs
40218	0217		



<b>40223</b>	<b>0222</b>	Auto zero range	Initial value: 30      Range: 0~80
<b>40224</b>	<b>0223</b>		Percentage of reference weight
<b>40279</b>	<b>0279</b>	Photoelectric dusting cycle	Initial value: 60, range: 60 to 1800
<b>40280</b>	<b>0280</b>		
<b>40281</b>	<b>0281</b>	Photoelectric dust removal time	Initial value: 1, range: 1 to 10
<b>40282</b>	<b>0282</b>		
<b>Statistics (Support function code 0x03)</b>			
<b>40501</b>	<b>0500</b>	Qualifying cumulative count	
<b>40502</b>	<b>0501</b>		
<b>40503</b>	<b>0502</b>	Qualified cumulative weight	
<b>40504</b>	<b>0503</b>		
<b>40505</b>	<b>0504</b>	Cumulative number of out-of-bounds	
<b>40506</b>	<b>0505</b>		
<b>40507</b>	<b>0506</b>	Out of tolerance accumulated weight	
<b>40508</b>	<b>0507</b>		
<b>40509</b>	<b>0508</b>	Cumulative number of oves	
<b>40510</b>	<b>0509</b>		
<b>40511</b>	<b>0510</b>	Accumulated weight of underweight	
<b>40512</b>	<b>0511</b>		
<b>40513</b>	<b>0512</b>	Cumulative number of disqualifications	
<b>40514</b>	<b>0513</b>		
<b>40515</b>	<b>0514</b>	Disqualified accumulated weight	
<b>40516</b>	<b>0515</b>		
<b>40517</b>	<b>0516</b>	Total cumulative times	
<b>40518</b>	<b>0817</b>		

<b>40519</b>	<b>0518</b>	Total accumulated weight	
<b>40520</b>	<b>0519</b>		
<b>40521</b>	<b>0520</b>	Maximum	
<b>40522</b>	<b>0521</b>		
<b>40523</b>	<b>0522</b>	Minimum	
<b>40524</b>	<b>0523</b>		
<b>40527</b>	<b>0526</b>	Pass rate	
<b>40528</b>	<b>0527</b>		
<b>40529</b>	<b>0528</b>	All qualified products are heavy	
<b>40530</b>	<b>0529</b>		
<b>40531</b>	<b>0530</b>	Average weight of out-of-tolerance products	
<b>40532</b>	<b>0531</b>		
<b>40533</b>	<b>0532</b>	Underweight products average weight	
<b>40534</b>	<b>0533</b>		
<b>40537</b>	<b>0536</b>	Total cumulative average weight	
<b>40538</b>	<b>0537</b>		
<b>40559</b>	<b>0558</b>		When the read value changes from 0 to 1, or from 1 to 0, the proof read value is updated data.
<b>40560</b>	<b>0559</b>	Check weight result reading identifier (0, 1 change)	(When power-on, the value is fixed at 3, stop and alarm is 2. When HMI programming, according to the change of value jump collection, attention should be paid to adding the judgment that is not equal to 2 or 3)
<b>40561</b>	<b>0560</b>		
<b>40562</b>	<b>0561</b>	Weight check result	Read as the result value of this test weight, when there is a new test result, the value will be updated.

40563	0562	Actual checking Speed	The number of products that actually pass through the checkweigher in one minute during the product checkweighing process
40564	0563		
Working Parameter(Function code:0x03, 0x10.)			
40051	0050	Unit	Initial value: 1    Range: 0~3
40052	0051		0:g    1:kg    2:t    3: lb
40053	0052	Decimal point	Initial value: 3    Range: 0~4
40054	0053		
40055	0054	Division	Initial value: 5    (Range: 1、 2、 5、 10、 20、 50)
40056	0055		
40057	0056	Full scale	Initial value: 400000 (range: Less than or equal to division*200000)
40058	0057		
The following is readable bit status (read function code 0x01, write function code 0x05)			
00001	0000	Weight positive overflow	
00003	0002	Weight negative overflow	
00005	0004	Weight plus and minus sign	
00006	0005	Zero mark	
00007	0006	Stable sign	
00008	0007	Keep signs	
00011	0010	Qualifying mark	
00012	0011	Underage sign	
00013	0012	Out-of-tolerance sign	
00014	0013	busy	
00015	0014	Call the police	

<b>00016</b>	<b>0015</b>	Batch times to
<b>00031</b>	<b>0030</b>	Run (when writing ON, start running, stop running when writing OFF)
<b>00032</b>	<b>0031</b>	Zero clear (when writing ON, zero clear)
<b>00033</b>	<b>0032</b>	Clear alarm (Clear alarm when there is an alarm written ON)
<b>00034</b>	<b>0033</b>	Print (when writing ON, print out)

### 7.3 Print content

1. When the communication mode is set to print, connect the printer, click the print button on the "Statistics" interface, or send the print command through the communication mode, the output will be as follows:

-----	上分隔横线符
DATE: 2015.10.15	打印日期
TIME: 15:21	打印时间
PRODUCT CODE: 1	产品号
TARE WT: 0.000kg	皮重值
UP LIM: 0.030kg	超差值
REF WT: 8.135kg	目标值
LOW LIM: 0.030kg	欠差值
PASS CT: 1	合格累计次数
PASS WT: 8.140kg	合格累计重量
PASS AVR: 8.140kg	合格平均重量
PASS RATE: 100.00%	合格率
OVER CT: 0	超差累计次数
OVER WT: 0.000kg	超差累计重量
UNDER CT: 0	欠差累计次数
UNDER WT: 0.000kg	欠差累计重量
TOTAL CT: 1	总累计次数
TOTAL WT: 8.140kg	总累计重量
MIN WT: 8.140kg	最小值
MAX WT: 8.140kg	最大值
-----	上分隔横线符

2. When the communication mode is set to print, the device will take the initiative to send data. Once the recheck is completed, the device will take the initiative to send the following content (horizontal line + recheck result + horizontal line) through the serial port:

5.998kg
5.996kg
5.996kg
6.004kg
6.000kg
6.002kg
5.998kg
5.996kg
6.006kg

If there is an external printing device, the above content will be printed out. The above content is only an example. The specific data to be printed is subject to the actual test result.

## 7.4 Set the parameters of the servo driver

1. Restore factory Settings; Go in AF005 parameter long press 1 second to display p.i.it. Then long press again  
It shows DONE. Indicates factory Settings have been restored. (If not, please check whether the enable signal PA500 is 0, if not, please set it to 0)

2. Method of switching parameters; After power-on, "bb" is displayed. Then press MOD key to display dP000. Then press MOD key to display PA000. Press ↑, ↓, or ← to adjust the parameters. "↑" is used to increase the set value, and "↓" is used to decrease it. Short press ← to move left one digit, and long press ← to display/set Settings. Hold this key long and as needed for about one second. AF005 Long press p.i.it long press DONE.

PA000----030

PA015----1&2&3, station number (input segment set to 1, duplicate detection segment set to 2, output segment set to 3)

PA016----0022

PA500----0100

PA502----0010

## 8. Program upgrade

The device can upgrade the motherboard program and touch screen program through the way of U disk. For details, please refer to "Operation Instructions on Buttons and Operation Frames" in section 3.3.2.




Figure 8-1 System Information screen example

After contacting our technical department, confirm that it is necessary to upgrade the program of the motherboard or touch screen. Obtain the corresponding program upgrade package first. Insert the USB flash drive with the upgrade package, click the "USB flash Drive Upgrade Controller" button to enter the upgrade interface, and perform the corresponding program upgrade according to the interface instructions. It is suggested to upgrade the program of the equipment under the guidance of our technical personnel, so as to avoid equipment failure or damage.

## 9. Size


When the equipment is installed on site, it is necessary to ensure that there is no contact between the weighing table and the surrounding area to avoid affecting the normal weighing. The distance between the surrounding area of the weighing table should be greater than 10mm.
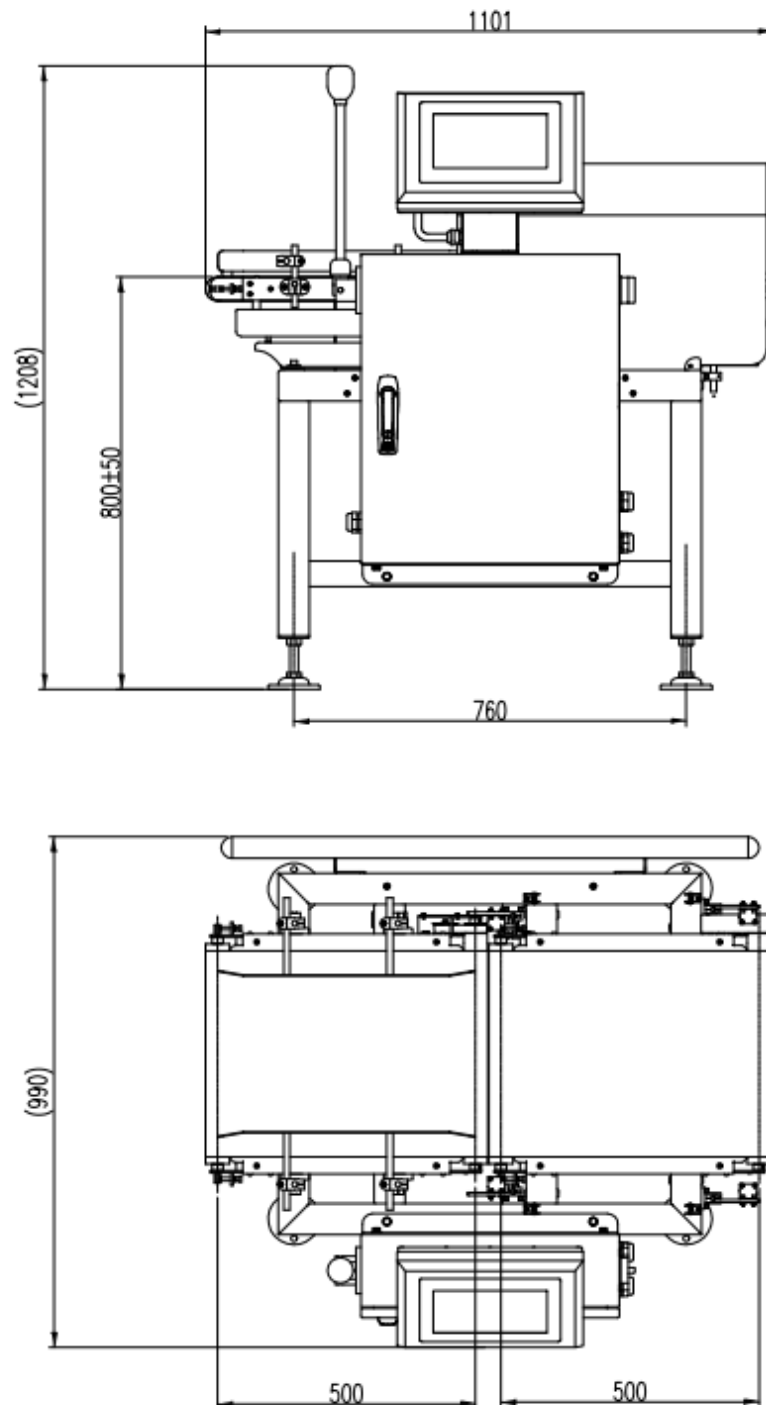
## 9.1 Outline size drawing (unit: mm)



**The outline size drawing of the removal mechanism is not optional**



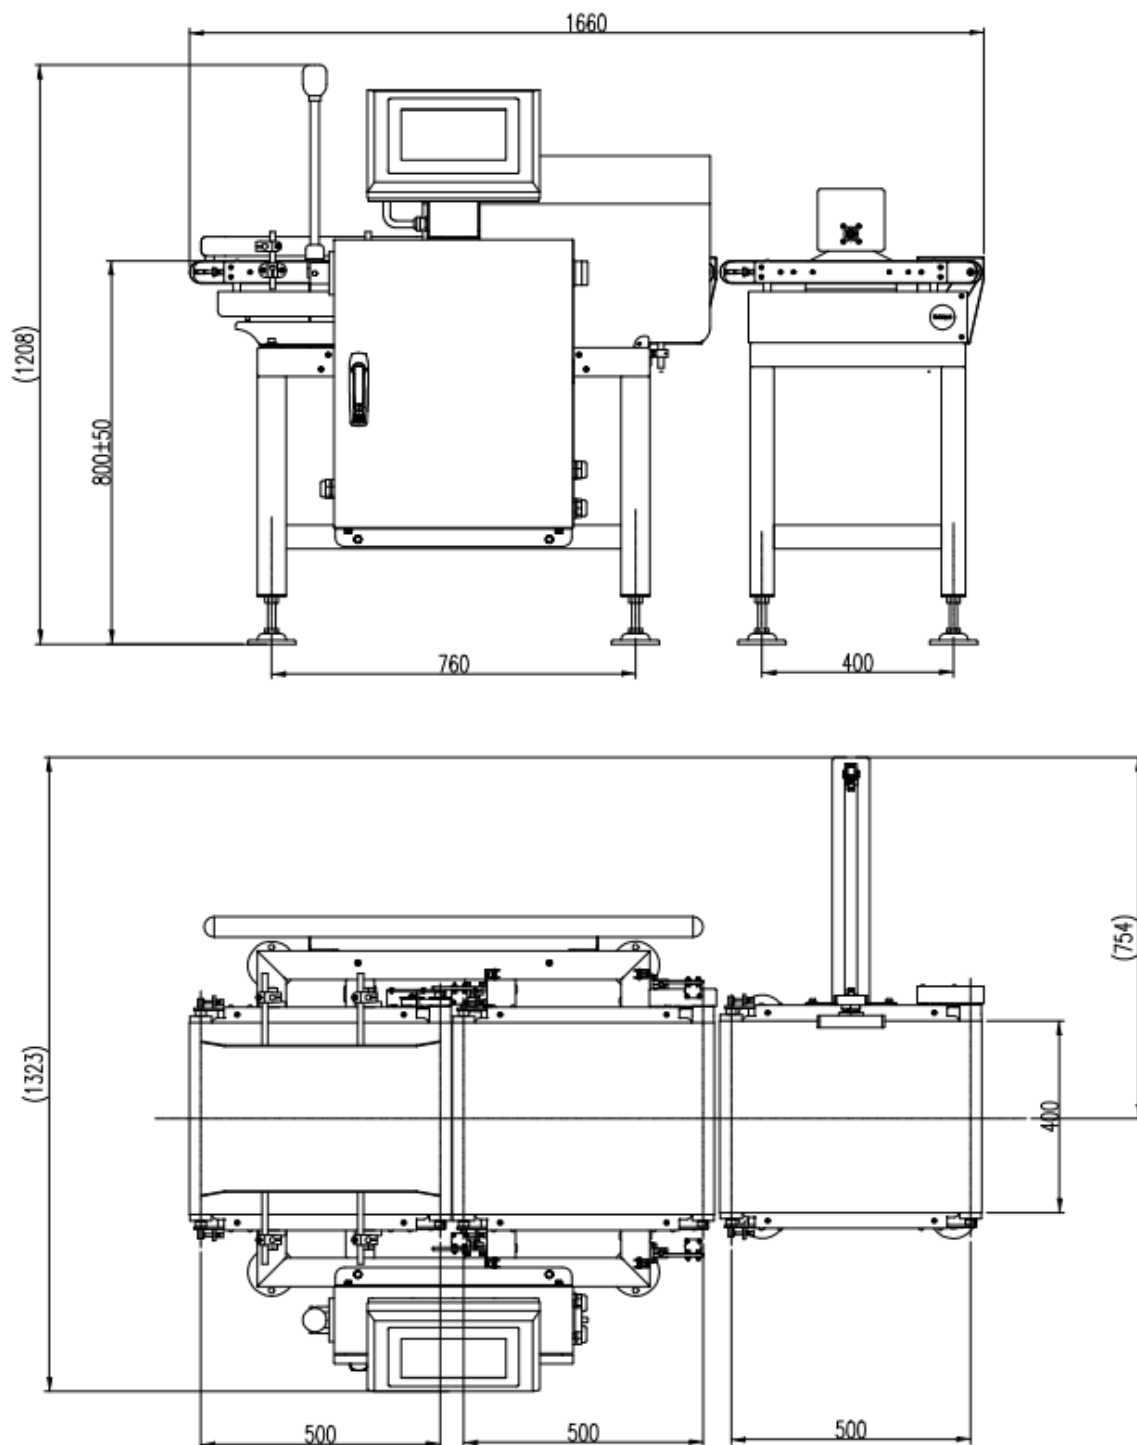

The outline size drawing of the ejecting mechanism is selected

**\* Note:** The width, length and height of the scale stand of non-standard customized products may be different from that of the standard products. For details, please refer to the technical documents or drawings confirmed by the user.

## 10. Equipment repair and maintenance

### 10.1 Maintenance of motors

#### 10.1.1 Routine maintenance

- Keep the motor clean and prevent oil, water and other dirt from entering the motor.
- Check motor terminal bolts and motor base fixing bolts for loosening
- Check the rotation of the motor blades
- Check whether the bearings at both ends of the motor have oil leakage and other phenomena
- Pay attention to observe whether there is abnormal noise, vibration and special smell in the operation of the motor.

#### 10.1.2 Regular maintenance

- For normal operation of the motor, the mechanic and maintenance electrician shall carry out the maintenance once a year.
- Remove dust or debris inside the motor (be careful not to damage the winding of the motor)
- Check whether the rotor of the motor is flexible and replace the wearing parts (bearings, etc.)
- Check the insulation resistance of the motor windings to the ground. When the insulation resistance is below  $0.5M\Omega$ , the motor must be dried.
- Replace the grease.
- Check that the no-load current is within the specified range

#### 10.1.3 Precautions

- In the process of maintenance, attention should be paid to the safety of electricity and mechanical transmission, and illegal operation is strictly prohibited.
- When installing the repaired or replaced motor, attention should be paid to the wiring mode, and attention should be paid to whether the motor rotation direction is consistent with the reality.
- After installation, the motor should be clicked, and pay attention to observe whether the motor runs normally.

### 10.2 Common problems of weight checking

#### 10.2.1 Touch screen no display

- The touch screen power supply has poor contact
- Touch screen damaged

#### 10.2.2 Large pulsation and abnormal fluctuation of data

- The screws of the crane stand are loose
- Sensors are obviously disturbed, such as air conditioning, air flow, etc.
- Ground shaking, vibration, such as nearby machine rotation interference, cars

passing by, etc.

- The conveyor belt is affected by viscous objects
- Debris accumulates or gets stuck in the sensor base
- The filter factor is set too low

#### 10.2.3 The display is always zero

- The object is light and the weight falls within the zero range, which should be resolved by resetting the "zero range".
- The sensor data line is loose, and the contact is poor.

#### 10.2.4 Abnormal data display

- The error is too large and needs to be recalibrated.
- If the product number selection is wrong, it should be solved by clicking "Switch Product" again and selecting the corresponding matching product number.
- The ambient temperature exceeds the normal operating range of the sensor
- The sensor components are aging or deformed.